# ProDAB-1 Plus & ProDAB-2 Dual User Guide





**Audio & Design** 

**Rev 4.3** 

Firmware 1.82/1.83

#### **Table of Contents**

Ι.	ini	itial Configuration	3
	1.1	Getting Started	3
	1.2	OLED DAB Display screens	5
	1.3	Other OLED display ICONs	5
2.	Ne	etwork set-up	6
	2.1	Login details for MP3 upload:	7
3.	DA	AB Scan	8
4.	M	lanual DAB Tune	9
5.	Sy	ystem Menu	10
6.	Ch	hange Over	13
7.	Ca	arousel Mode	16
8.	М	IP3 menu	19
9.	En	ngineering menu	20
	9.1	GPIO Outputs	23
	9.2	GPIO Output options available	23
	9.3	GPIO Output Pin out	24
	9.4	GPIO Inputs	24
	9.5	GPIO Inputs options available	24
	9.6	GPIO Input Pin out	25
	9.7	SNMP Configuration	26
10	١.	Signal Quality troubleshooting	28
	10.1	OLED Technical Information Screens	28
	10.2	How ProDAB Tunes to a DAB signal	29
	10.3	DAB scan	30
11		AES67 Support	31
12		System Block Diagrams	34
13		Rear Panel	35
	13.1	Inputs	35
	13.2	Outputs	35
	13.3	Common Grounds	35
	13.4	+5V Current Limited supply	35
14		Firmware Upgrade	37
15		Web Interface	38
	15.1	Default Username & Password	38
16		Spectrum Analyser Utility (Front Panel Menu)	57
	\٨/	/ARRANTY·	60

#### Audio & Design

51 Paddick Drive, Lower Earley, Reading

Berkshire, RG6 4HF. UK Tel: +44 118 324 0046 Info: sales@adrl.co.uk Web:www.adrl.co.uk

Copyright 2019 © Audio & Design Reading Ltd Rev 4.3 (Firmware 1.82/1.83)

# 1. Initial Configuration

## 1.1 Getting Started



ProDAB takes approximately 35 seconds to boot up, during this time the power LED will flash.



Press to select:
DAB/DAB+
MP3
Web (Internet Radio)

FM



When the OLED display is not in screen saver mode (Pressing any of the "Nav" keys will bring the unit out of screen saver)

**DAB Mode:** display the available DAB services **OK**, will select the currently displayed service.

**MP3 Mode**: display the MP3 files available **OK**, will play the currently displayed file.

**Web Mode**: display available web links **OK**, will select the currently displayed link.

**FM Mode**: tune FM receiver in 100KHz steps **OK**, will tune to the currently displayed frequency.





Unlocked




Locked

To Unlock front panel press and hold Unlock button until padlock symbol changes to Unlocked. This button will also jump out of Screen Saver or Main Menu to service display.

When displaying currently selected service, station or track press

 $oldsymbol{\dot{1}}$  to change displayed information.

When ProDAB is shipped from the factory it will require a "DAB Scan" to find your local multiplexers. You will see a message "No Stream Selected – Press OK for Menu" Press the OK button then select DAB Scan use the button to select the type of scan you require and to start scanning. ProDAB will then select the first service alphabetically that it finds. Press to view all other found services & OK to select.

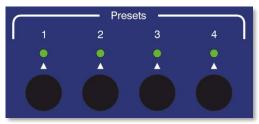

Press and hold Preset button to save currently selected service, station, MP3 track or Web link.



Pressing whilst the preset directory is shown will cycle through the available presets, including those not available by direct access buttons – i.e. Presets 5 to 15



Presets also store mode, so can be used as a quick way to switch between DAB, FM, MP3 & Web.



Mono/Stereo selection will change the audio output in all modes, including IP stream output.




The headphone output is suitable to drive headphones with a minimum impedance of  $16\Omega$ 



Tuner selection button selects which output is currently being monitored by the headphone output and controlled by the front panel buttons



Press and hold Tuner button to change unit mode between Diversity or Independent modes

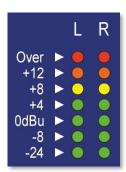

LED Meters - Over = 1dB below fsd. 0dBu = -18dB below fsd.

#### 1.2 OLED DAB Display screens



Press Info button to cycle through available display screens



Basic screen with Service Name, program information, bit rate & mode

BBC Radio 2
128(11) BBC NATIONAL DAB
128K JOINTS - POP MUSIC
SID:C222:0002 CU:A096 - N096
RECONFS:O WARNS:O SLISTS:2
AF L:-15dB R:-15dB OFL:O
RSS:\(\frac{4}{2}\) SNR:\(\frac{4}{2}\) CNR:\(\frac{2}{2}\) ERR:\(\frac{4}{2}\)26
[12]Jeremy Vine

Information about selected MUX, audio algorithm, CID & SID, allocated Consumers Units

C1R1 ASA2 ASB4 HPO VUO G10
R1 RF1 ACQ1 SRV1 ENS1
R2 RF1 ACQ0 SRV0 ENS0
R1 RSS42 SNR3 12B:C222
R2 RSS11 SNR0 11D:FFFFFFFF
UMA1 UMB1 rxact0 fa0 fb0

SBC Radio 2 >>>
SI DAOO R100 R299 CU99 AE99

Technical information for both tuners



Oscilloscope display to help with setting change over parameters

See Change Over section for more details

#### 1.3 Other OLED display ICONs



Change Over Disabled



Change Over Enabled



Change Over Active



Change Over Mode Changing



Streaming port 5000 active



Carousel Mode Enabled



LAN Connected



LAN Disconnected



LAN & Streaming Connected





LAN & Streaming Web Radio Mode



AES67 or Multicast active

# 2. Network set-up

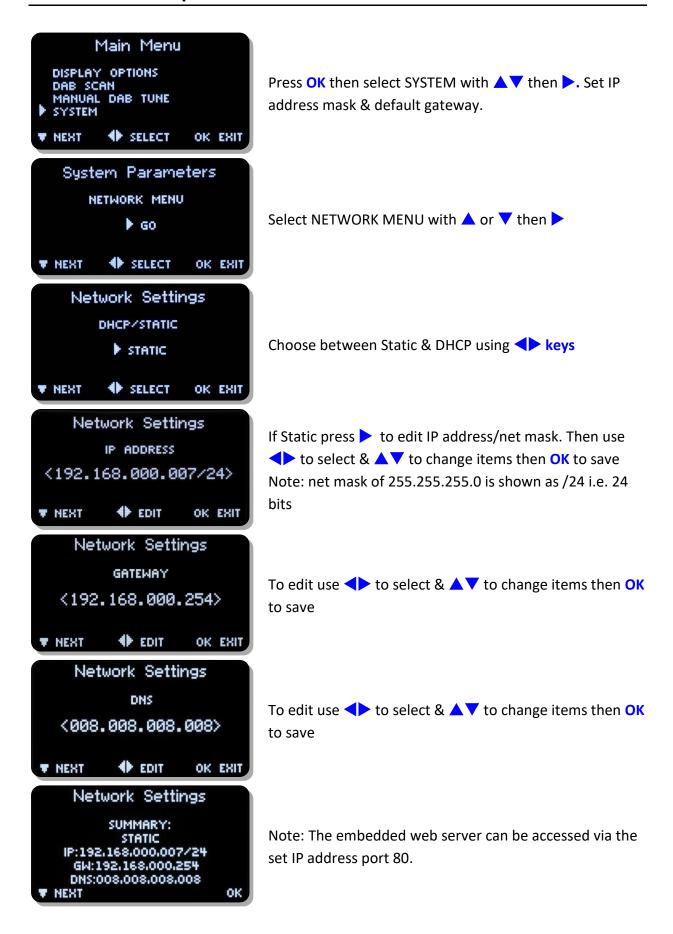

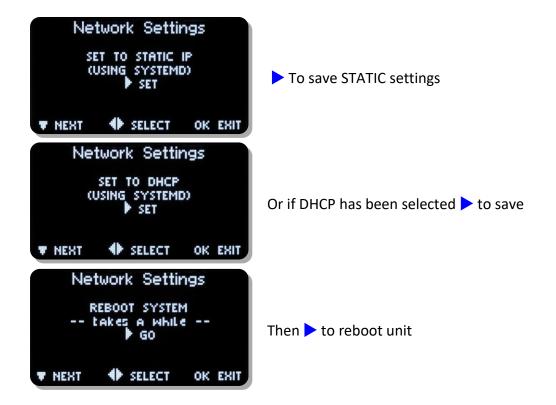

Units are shipped with the network set to STATIC:

IP address - 192.168.0.7

Net Mask - 255.255.255.0

Default Gateway - 192.168.0.254

DNS – 8.8.8.8 (Google)

To upload MP3 files use a SFTP client such as Filezilla, but, note that we use non-standard port for SSH & SFTP of 43222 See MP3 Menu section below on how to upload files using a USB stick.

#### 2.1 Login details for MP3 upload:

Username - mp3

Password - 2033740

Filezilla download - https://filezilla-project.org/




When displaying menus pressing  $\triangle$  or  $\nabla$  takes you to the next or previous menu item. **OK** is for selecting/accepting the desired action or parameter.


Will take you into sub-menu or editing function.

# **ProDAB-2 Dual User Guide**

#### 3. DAB Scan

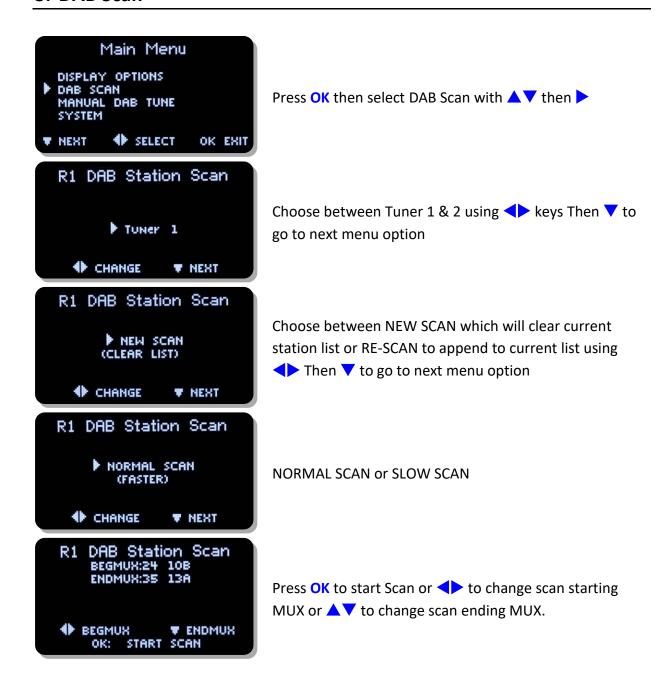

#### 4. Manual DAB Tune

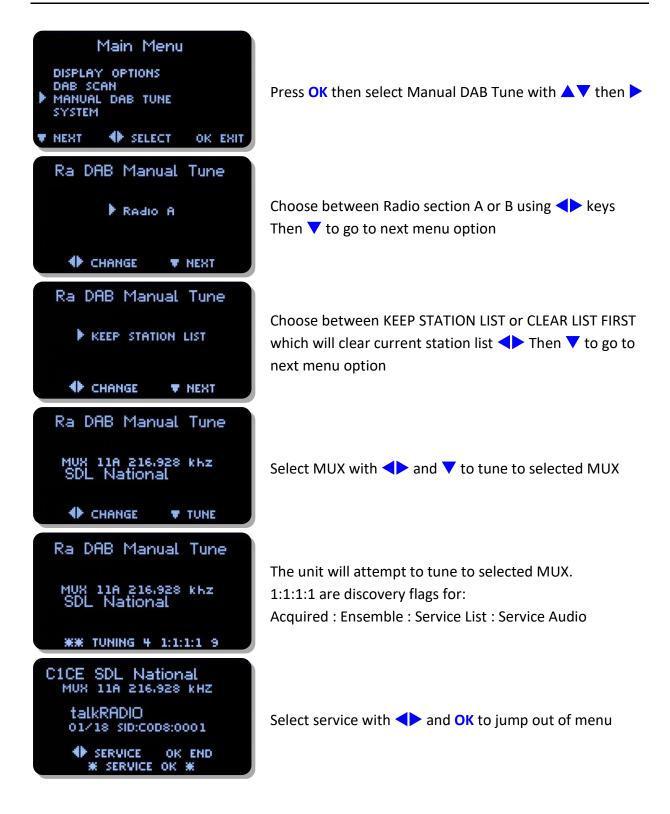






If the unit has been used in a different location then it's recommended that you CLEAR LIST FIRST.

This will ensure that there are no conflicts with previously tuned services SID & CID

# 5. System Menu

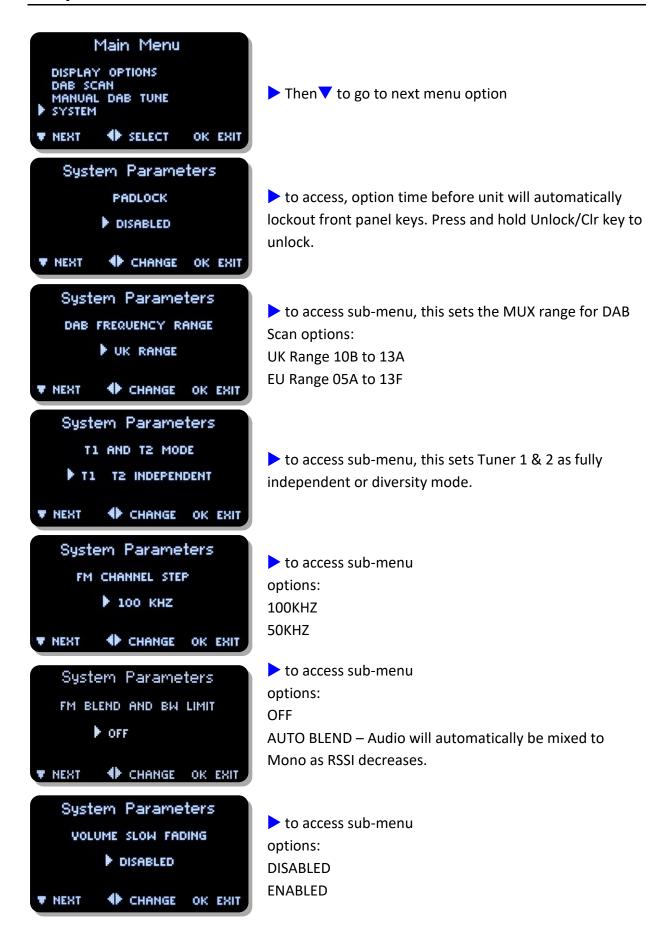

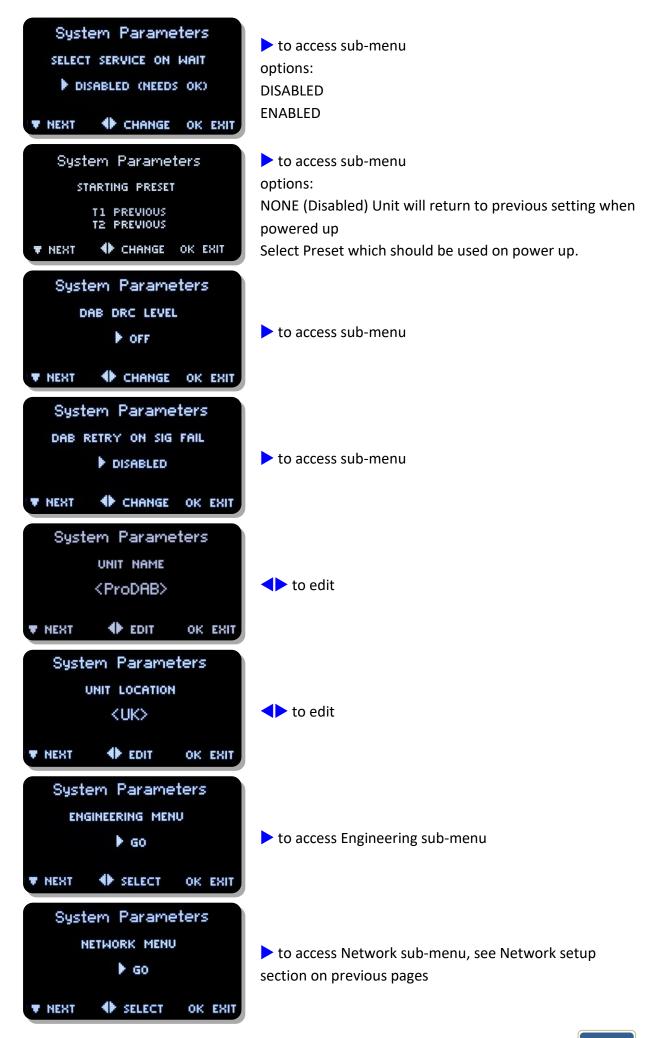

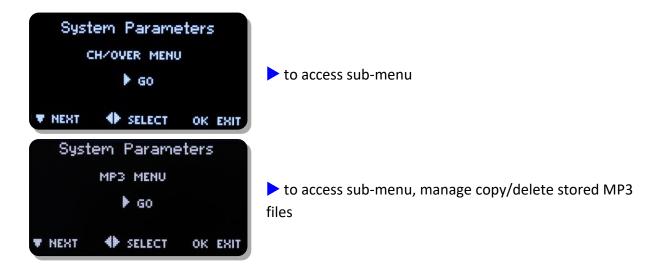


# 6. Change Over

ProDAB can automatically play out a stored MP3 or switch to Internet radio when audio silence is detected or when RF signal level drops below a set threshold. From version 160/160 Change Over is implemented as a separate software module that is "hard coded" to use Preset 1 as the main program selected and Preset 2 as the "fail over" preset. Once "Armed" front panel controls are locked out. To disable Change Over mode, press and hold the Unlock/Clr front panel button. On ProDAB Dual only Tuner 1 can be set to Change Over mode, Tuner 2 still functions but cannot be changed. Also, from version 160/160 Change Over can be "Armed" and parameters changed via the web GUI.

#### **Change Over modes**

	Preset 1	Preset 2
<b>⊘</b>	DAB	MP3 or Web
<b>⊘</b>	FM	MP3 or Web
<b>⊘</b>	Web	MP3 or DAB or FM
8	FM	DAB
8	DAB	FM

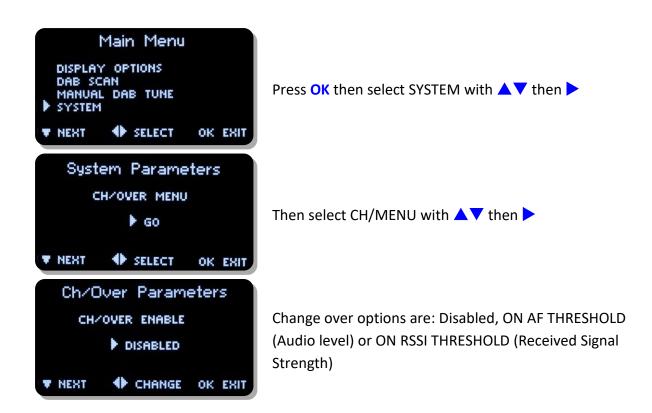



Change over parameters can be optimized for audio threshold/rf RSSI along with delay, attack and decay times. Other options – SMOOTH MUSIC, POP MUSIC, SPEECH, CLASSIC MUSIC & RSSI LEVEL

Change Over, Disabled or detection on audio silence or low RSSI

MP3 Repeat options:

STOP AT END – Play once then stop

REPEAT SAME – Play single selected MP3 then repeat.

NEXT IN LIST – Play all MP3 once, then stop

STOP AT END

CHANGE

OK EXIT

W NEXT

Oscilloscope display, see notes below for how to use this tool.

**AF** is the instant L+R (mixed) volume level for the selected source (i.e channel 1 as "C1") This is shown as a number (0..255) and also as a time plot.

**PK** is the peak value of the above, and modified by the attack and decay constants settable by the change over menu, "pk" is shown as a number (0..255) and as a time plot.

**GT** is the raw gate logic level generated by the value **PK** threshold by constant value **TH** which is also settable from the changeover menu and displayed as a number (0..255)

**EG** Is the extended (smoothed) gate version of **GT** by adding extra lead and lag times to avoid glitches.


Lead and lag are settable from the changeover menu. The **EG** gate is the one that defines the changeover state.


The general procedure is to set the **GT** threshold, attack and decay so that it more or less follows the audio, then adjust the lead and lag times for **EG** so that short glitches are minimised or removed.

**SI** is the silence gate for the same source, (obtained by a different calculation) and shown here for comparison.

#### 7. Carousel Mode

When enabled ProDAB can cycle through a range of Presets monitoring each one for a set sampling window. If a failure is detected then a SNMP trap is generated for that Preset. The range of Presets is from 1 to 14 and can be set to monitor any range of Presets within these limits. Thresholds for various parameters can be set as detailed below:

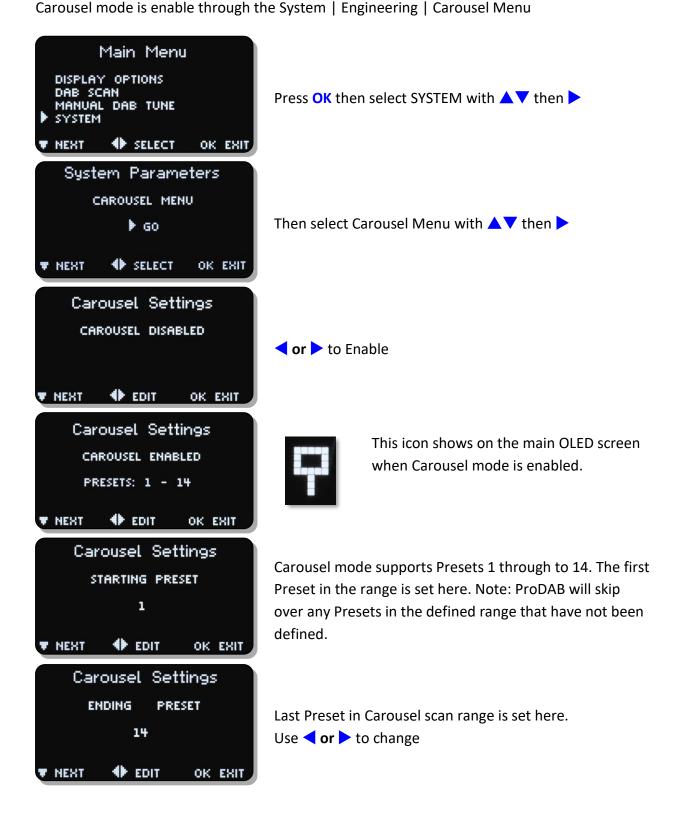

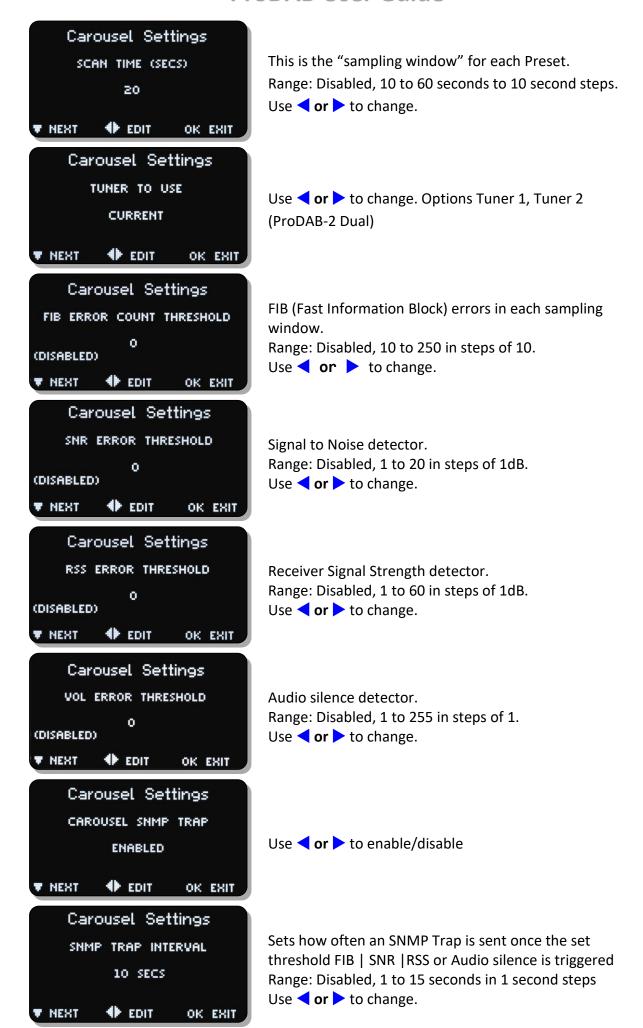

Front panel indication of the current Preset that is being sampled is shown by the LED/LEDs above the 4 front panel Preset buttons flashing.

Note: As there are only 4 front panel presets the indication of which Preset is currently being sampled is shown as a "binary" count on the front panel LEDs.

Preset	1	—— Pre: 2 ▲	3 •	4
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				

#### 8. MP3 menu

ProDAB can store internally up to 12GB of MP3 files. To upload MP3 files to the unit, copy your files to the root of a USB stick formatted as FAT32 and insert in to any of the USB sockets on the rear of the unit.



File names for MP3 files **MUST NOT** contain spaces.

If you are in MP3 mode whilst uploading files, then you need to change mode and back to MP3 in order to update the file list.



Delete files

With MP3 file operations press info/Ins key to upload files and Unlock/Clr key to delete files


**Upload files** 



MP3 file can be selected on your local PC and uploaded via the web interface.



First option in MP3 menu allows you to copy or Delete files on the USB stick. Choose file using keys press Ins key to upload to ProDAB or Unlock key to delete. key takes you to next menu

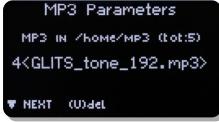

MP3 files on the ProDAB are stored in /home/mp3 this menu allows you select ( ) and delete stored files.





MP3 playback options press **\left** to change: Repeat current track






# 9. Engineering menu

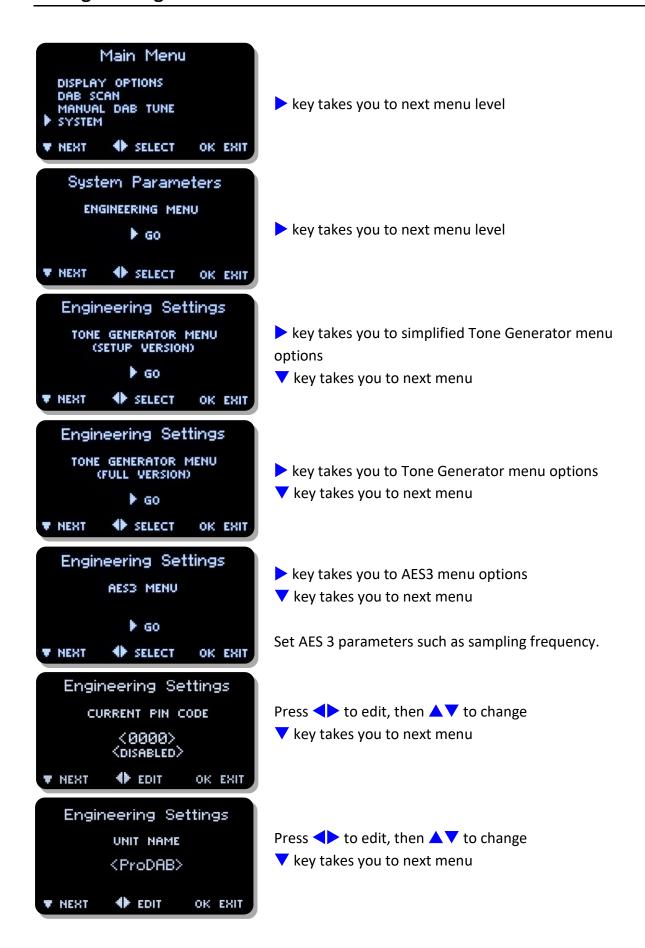

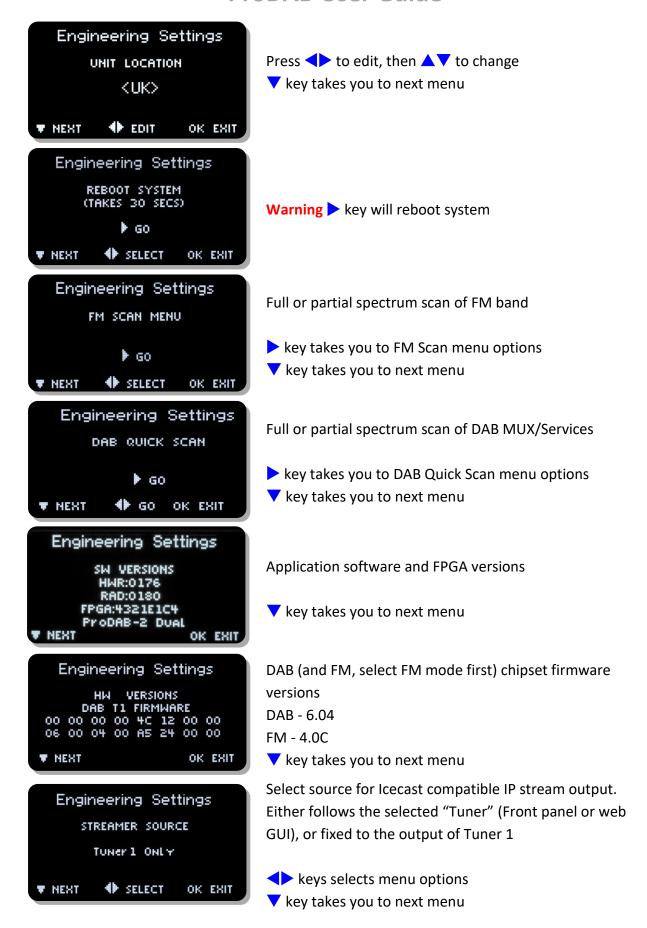

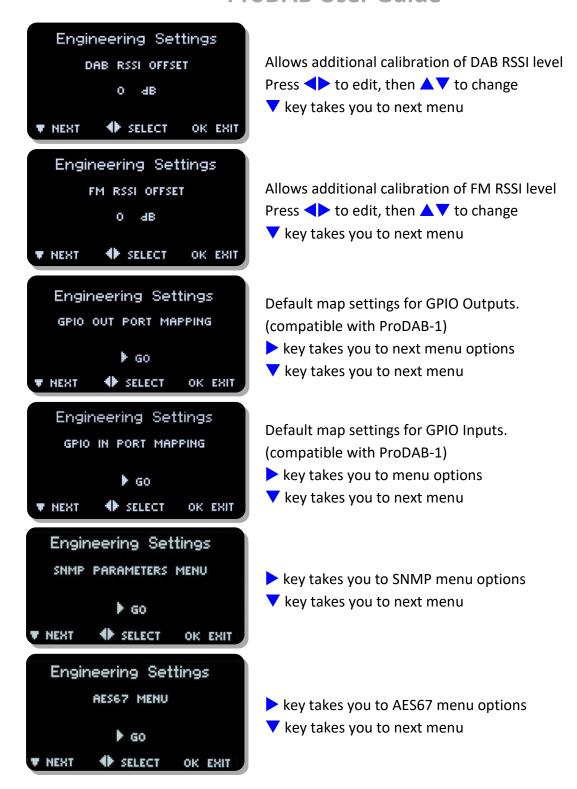

#### 9.1 **GPIO Outputs**





& A to change

Press Mono button to toggle

active High (+) or active Low (-)

#### **Default GPIO Output mapping and pin out**

GPO-0 (pin 23)	Low = In changeover to MP3, Tuner 1
GPO-1 (pin 22)	Low = RDS TA Traffic Flag active, Tuner 1
GPO-2 (pin 21)	Low = Mono, Tuner 1
GPO-3 (pin 20)	Low = Audio silence detect, Tuner 1
GPO-4 (pin 19)	Low = RSSI below threshold, Tuner 1
GPO-5 (pin 10)	Low = Audio silence detect, Tuner 2
GPO-6 (pin 9) Low=	Network Fail

# 9.2 GPIO Output options available

#### **OLED Display**

Changeover Active
Power detect wav
Output toggles at 1.5Hz

Power detect '1' Output low whilst unit is operational

Carousel Trap Carousel Trap Active

Stream Active Streaming output has active connection/s
Ra AF Silence Silence detected on Tuner 1 (internal)

CPU AF Silence Silence detected on Streaming Output (internal)

SNR Low Ra Signal to Noise low on Tuner 1

Diversity Unit in Diversity mode

Mono Flag on DACb Output 2 set to mono (DAB, FM, MP3 or Web)

Network Fail No network connection

Silence on DACb

RSS Low Ra

Received Signal Strength Low Tuner 1

Silence on DACa

Silence detected on Output 1 (internal)

Mono Flag on DACa Output 1 set to mono (DAB, FM, MP3 or Web)

FM TA Flag FM TA Flag active Tuner 1

Default GPIO allocation version 1.72/1.75 firmware onwards

## 9.3 GPIO Output Pin out:

GPO-0 (pin 23)	Low = In changeover to MP3, Tuner 1
GPO-1 (pin 22)	Low = RDS TA Traffic Flag active, Tuner 1
GPO-2 (pin 21)	Low = Mono, Tuner 1
GPO-3 (pin 20)	Low = Audio silence detect, Tuner 1
GPO-4 (pin 19)	Low = RSSI below threshold, Tuner 1
GPO-5 (pin 10)	Low = Audio silence detect, Tuner 2
GPO-6 (pin 9)	Low = Network Fail
GPO-7 (pin 8)	Low = Not Defined

**Common Grounds:** pins 2, 3, 4, 11, 12 & 13

+5V Current Limited: pins 24 & 25

## 9.4 **GPIO Inputs**



#### 9.5 **GPIO Inputs options available**

Option	Activate (Closing contact to GND)	Release (Open)
0	No action	No action
1	Preset 1 Tuner 1	No Action
2	Preset 2 Tuner 1	No Action
3	Preset 3 Tuner 1	No Action
4	Preset 4 Tuner 1	No Action
5	Preset 1 Tuner 2	No Action
6	Preset 2 Tuner 2	No Action
7	Preset 3 Tuner 2	No Action
8	Preset 4 Tuner 2	No Action
9	Preset 2 Tuner 1	Return to Preset 1 Tuner 1
10	Preset 3 Tuner 1	Return to Preset 1 Tuner 1
11	Preset 4 Tuner 1	Return to Preset 1 Tuner 1
12	Preset 1 Tuner 1	Return to Silence
13	Preset 2 Tuner 1	Return to Silence
14	Preset 3 Tuner 1	Return to Silence
15	Preset 4 Tuner 1	Return to Silence

Default GPIO allocation version 1.30 firmware onwards

# 9.6 **GPIO Input Pin out**:

GPIO-0 (pin 18)	Gnd to select preset 1, Tuner 1
GPIO-1 (pin 17)	Gnd to select preset 2, Tuner 1
GPIO-2 (pin 16)	Gnd to select preset 3, Tuner 1
GPIO-3 (pin 15)	Gnd to select preset 4, Tuner 1
GPIO-4 (pin 14)	Gnd to select preset 1, Tuner 2
GPIO-5 (pin 1)	Gnd to select preset 2, Tuner 2

**Common Grounds:** pins 2, 3, 4, 11, 12 & 13

+5V Current Limited: pins 24 & 25

#### **9.7** SNMP Configuration:




# **SNMP Traps:**

Trap	Description	Typical Octet String
FM TA	FM Traffic Flag	Ra FM TA flag ON 97000KHz Rb FM TA flag ON 92500KHz
RSS	Received Signal strength	Ra RSS Dropped low Ra RSS Recovered Hi  Rb RSS Dropped low Rb RSS Recovered Hi
DAC	Audio silence detect at audio outputs	Da Silence Started Da Silence Ends  Db Silence Started Db Silence Ends
RA	Audio silence detect at DAB/FM chip set outputs	Ra Silence Started Ra Silence Ends  Rb Silence Started Rb Silence Ends
Chover	Change Over state	Change over Started ON Change over Ended OFF
Carousel		Carousel(trap) preset:2 <bbc 4="" radio=""> rss:0(&lt;10)</bbc>
Summary	Use for Debugging only	Da sil:00 DAB <bbc 2="" radio=""> rs:38 sn:04</bbc>

Note: Ra/Da = Tuner 1, Rb/Db = Tuner2

# 10. Signal Quality troubleshooting

#### 10.1 OLED Technical Information Screens

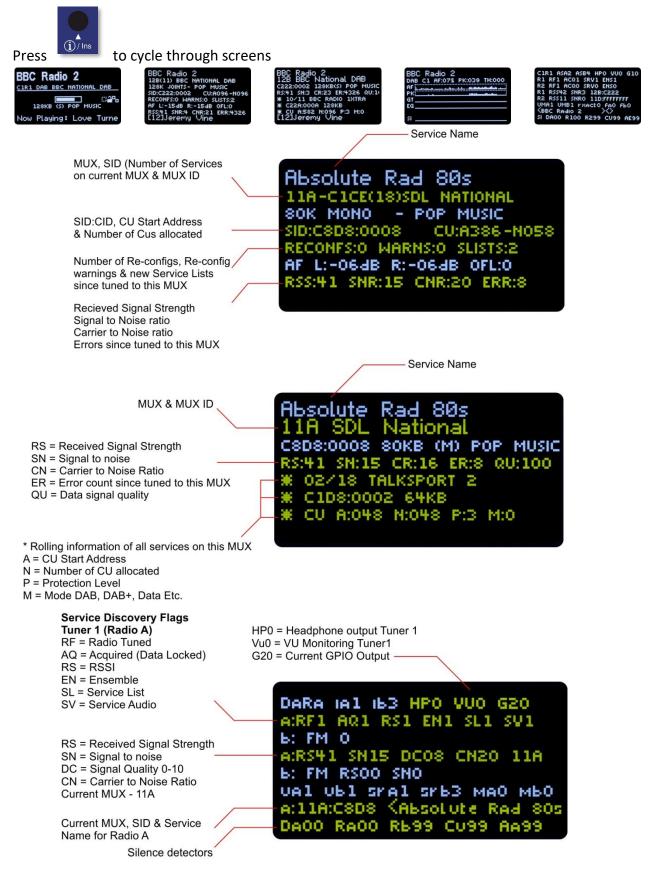

#### 10.2 How ProDAB Tunes to a DAB signal

When tuned to a new RF DAB channel (as shown by the RF flag), ProDAB will first attempt to obtain low level data sync with the received digital stream. The AQ (acquisition) flag will be set when this is stable. At this point, a rough measure of signal level is also recorded (RSSI level). ProDAB will then attempt to obtain ensemble information (EN flag), and then wait for, and download, the service list (SL flag), which contains the list of services with their SID and CID numbers. Finally, ProDAB will lock onto the desired audio service (SV flag) and audio enabled.

If no multiplexer is present, or the signal too low or bad, the AQ flag will not be set, even though RSS may show some positive value (background noise or other carriers) With a good clean DAB signal (i.e. RSS greater than 30), the AQ flag should be set within 2-3 seconds. The Ensemble flag (EN) should follow within a second or so, and the Service list (SL) after a few more seconds. If the "wanted" SID/CID services are not present in the service list, the audio will not be enabled. Note that ProDAB will accept a CID value of FFFF as a wildcard, and will lock to the first SID, whatever its CID value present in the service list.

The above tuning status flags are shown on the LDC display in the fourth information display page in real time form (second line from top). (enter (I) four times) This can be used to show how ProDAB is tuning and how long it is taking to sync to the various data blocks.

The seventh line of the second information display page (enter (I) once) shows the current RSSI, SNR (Signal to noise ratio) CNR (carrier to noise ratio) and the accumulated number of block errors to date. Observing the latter over a short period (e.g. a minute) can give a good indication on how good the received stream is.

The flags are also shown when in DAB manual tune mode (bottom row) the message format being:


("nn" and "mm" are count up timers)

\*\* TUNING nn RF:AQ:RS:EN:SL mm \*\*

To help visualise the number of DAB multiplexers in the band, a "quick DAB scan" function is available under the engineering menu (/SYSTEM/ENGINEERING/QUICK DAB SCAN) This shows a continuous scan of the relevant band together with their RSSI and SNR levels. This can be left running continuously to visualise a snapshot of all multiplexers present.


Note: See page 9 for more information about how to manually DAB tune.

#### 10.3 DAB scan

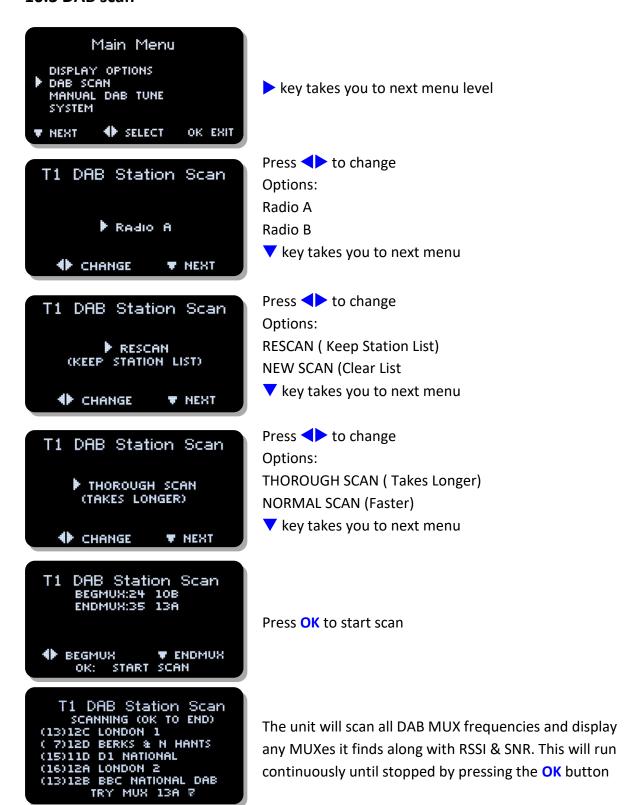

#### 11. AES67 Support

From firmware version 171/170 ProDAB supports basic AES67 connectivity with audio algorithms for G.711 & PCM 24bit as well as multicast streaming output.

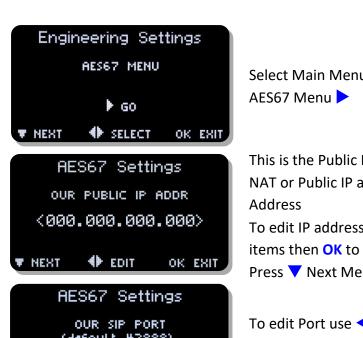

Select Main Menu | SYSTEM | Engineering Menu |

This is the Public IP address, set this if you are using NAT or Public IP address is different from LAN IP

To edit IP address use to select & to change items then **OK** to save.

Press V Next Menu



To edit Port use \to select & \to change items then **OK** to save. Note traditional SIP port is 5060 Press V Next Menu



Leave as 000.000.000.000 if you wish SIP to negotiate Remote IP address otherwise, to edit IP address use  $\triangleleft$  to select &  $\triangle$   $\vee$  to change items then OK to save. Press V Next Menu



Leave as 00000 if you wish SIP to negotiate Remote Port address otherwise, to edit Port use **\rightarrow** to select & **T** to change items then **OK** to save.

Press V Next Menu



With Timeout set to zero, ProDAB will continuously send UDP audio packets until it receives a "BYE" command via SIP.

To change Timeout use \to select & \to \to change items then OK to save.

Press V Next Menu



AES67 Settings

AUDIO PROTOCOL
0=G711 96=PCM24
<96>

MENT EDIT OK EXIT

AES67 Settings
REM AUDIO ADDRESS
From UDP SIP source add
▼ NEXT ◆ EDIT OK EXIT

AES67 Settings
REM AUDIO ADDRESS
From SIP Contact Field
▼ NEXT ◆ EDIT OK EXIT

AES67 Settings
REM AUDIO ADDRESS
From our fixed IP/port
▼ NEXT ◆ EDIT OK EXIT

AES67 Settings
REM AUDIO ADDRESS
Multicast
▼ NEXT ◆ EDIT OK EXIT

AES67 Settings

REM AUDIO IP ADDR
(MUST BE NON ZERO)
<239.192.000.006>

▼ NEXT ◆ EDIT OK EXIT

By default ProDAB will answer any calls made to SIP:xxx@ProDAB.IP.Address. Calling SIP:255@ProDAB.IP.Address will access built-in 1kHz tone generator.

To edit number use **◆** to select & **△ ∨** to change items then **OK** to save.

Press V Next Menu

Press 

▼ Next Menu

ProDAB can determine the IP address of units trying to connect using the following methods:

- From UDP source address (default)
- From Contact Field
- From fixed IP/port set in earlier menus.
- Multicast

When Multicast is selected ProDAB will immediately start sending Multicast packets.

Typical values for Axia X-node using multicast IP Address 239.192.x.x Port 5004

Multicast Address of unit



#### To set ProDAB for multicast transmit:

- Go to AES67 menu
- Enter multicast address under "rem audio ip addr e.g. 239.192.006.001
- Enter multicast port under "rem audio port" e.g. 5004
- Enter multicast protocol (96) under "audio protocol"
- Enter "000" under "audio timeout" (unless time limited multicast is wanted)
- Select multicast under "rem audio address"

This will start multicast immediately on the given port

#### To turn off multicast (from AES67 menu):

Select other than multicast under "rem audio address"

#### To select MULTICAST reception on an Axia xNode:

- Log into the axia web interface
- Select "destinations"
- Under line # enter "239.192.6.1:5004" then apply


xNode will start receiving immediately, note the displayed entry may change

Note: Axia xNode supports multicast addresses by default in the range 239.192.x.x

#### To select UNICAST reception on the xNode:

- Log into the xNode web interface
- Select "destinations"
- Under line # enter "sip:1@239.192.6.1:5004" then apply

# 12. System Block Diagrams

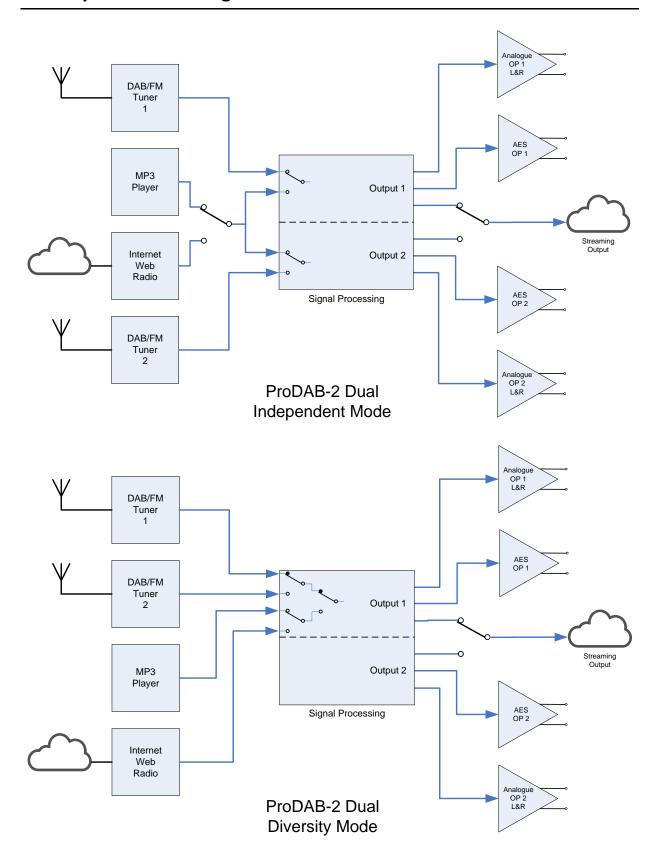


#### **13**. **Rear Panel**










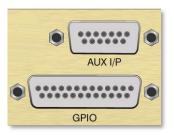

Darlington (Open Collector) Output

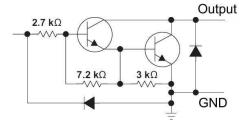

Analogue balanced audio outputs, gain adjustable from OdBU to +20dBU.

Pin 1 = GND

Pin 2 = + output

Pin 3 = - output

AES3 digital output, sampling rate adjustable via menu to 48Kbps or 96Kbps

Pin 1 = GND

Pin 2 = + output

Pin 3 = - output

Antenna input for DAB & FM

F-Type female connector fitted to unit.

Default GPIO allocation version 1.30 firmware onwards

#### **13.1** Inputs:

Gnd to select preset 1, Tuner 1
•
Gnd to select preset 2, Tuner 1
Gnd to select preset 3, Tuner 1
Gnd to select preset 4, Tuner 1
Gnd to select preset 1, Tuner 2
Gnd to select preset 2, Tuner 2

#### 13.2 Outputs:

GPO-0 (pin 23)	Low = In changeover to MP3, Tuner 1
GPO-1 (pin 22)	Low = RDS TA Traffic Flag active, Tuner
GPO-2 (pin 21)	Low = Mono, Tuner 1
GPO-3 (pin 20)	Low = Audio silence detect, Tuner 1
GPO-4 (pin 19)	Low = RSSI below threshold, Tuner 1
GPO-5 (pin 10)	Low = Audio silence detect, Tuner 2
GPO-6 (pin 9)	Low = Network Fail
GPO-7 (pin 8)	Low = Not Defined

**13.3 Common Grounds**: pins 2, 3, 4, 11, 12 & 13

**13.4 +5V Current Limited supply:** pins 24 & 25

1







RS232 I/O – ProDAB Production units allows access to operating system console at 115k baud.

Pin 2 = Tx data

Pin 3 = Rx data

Pin 5 = GND

RJ45 LAN connector 10/100 auto negotiation MDX

USB Can be used for additional MP3 storage.

IEC Mains inlet – Fuse T3.15A 90/240VAC


Provision for IEC retaining clip and M4 Earth tag

## **ProDAB-2 Dual User Guide**

## 14. Firmware Upgrade

Firmware upgrades will be supplied as a package of files in ZIP format.

This can either applied directly from the web GUI (Version xxx onwards) by browsing to the ZIP file or by unzipping files to the root of a USB flash drive formatted FAT32

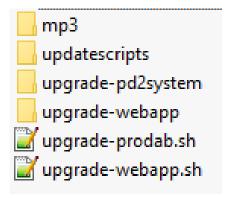

Root of USB flash drive should look like above.

Insert the flash drive into one of the USB sockets on the rear on the unit.

After a few minutes the ProDAB will re-start using the new firmware.

From version 160/160 there is new DAB front-end firmware available (version 6.0.4) please contact sales@adrl.co.uk if you wish to apply this upgrade.


### 15. Web Interface

Using a web browser navigate to the IP address of the ProDAB (default 192.168.0.7)

#### 15.1 Default Username & Password:


Sign in as:

Username – admin Password – 1234

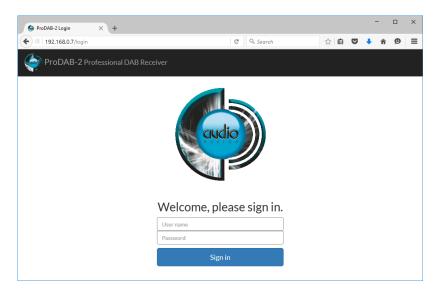




Note that the web interface has been tested with the following browsers: Firefox, Chrome & Internet Explorer version 10 onwards

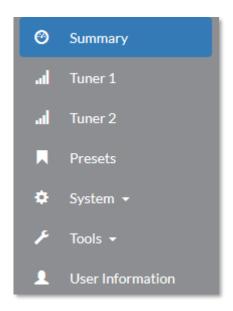

System information & User Information is only available when you sign In as Admin. Users can only be added or changed when you sign in as Admin.

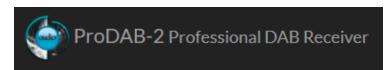

### **Info Bar ICONs**





Click here to play audio for currently selected tuner. Note: that when option "STREAMER SOURCE" is set to "Tuner 1 Only" in Engineering menu you can only listen to Tuner 1.




Click here to turn off audio monitor stream.



Change Over mode disabled



Change Over "Armed" Set to AF Threshold mode, Preset 1 currently selected

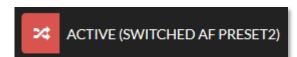


Change Over "Active" Set to AF Threshold mode, Preset 2 currently selected



Click on Mono or Stereo indicator to change hardware output mode of ProDAB. This is independent of received service or station. Tuner 1 or 2 can be set separately.



This is the user you are currently signed in as.

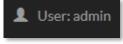

Click here to access or download an "embedded" copy of the User Guide as a PDF.



Click here to Sign Out.








In order to control a Tuner using the web interface, it has to be selected in the individual Tuner Info page.

Select Tuner: Tuner1

Select here

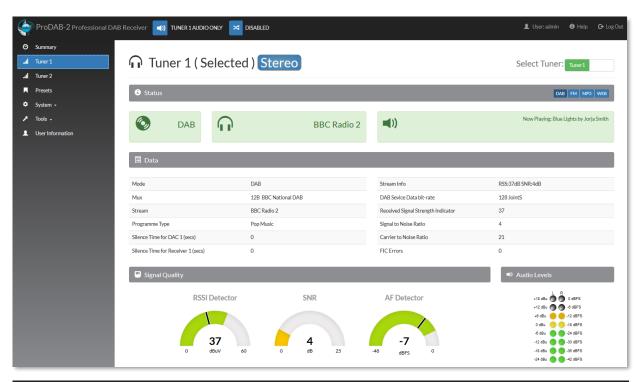

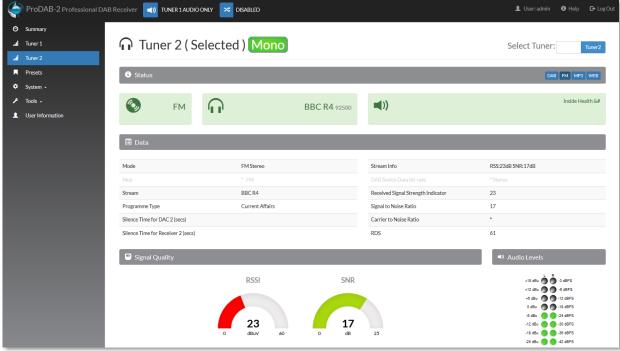

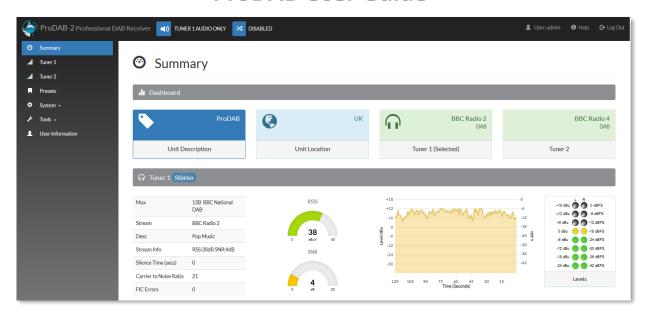

The Summary screen shows information about both tuners on Dual units and Tuner 1 on ProDAB-1 Plus.

#### DAB Mode Info

Mux	BBC National DAB
Stream	BBC Radio 1
Desc	Pop Music
Stream Quality Info	RSS:42dB SNR:4dB
Signal Credibility	8
AF Peak	AF pk:92
Silence Time (secs)	*

#### MP3 Mode Info


Mux	MP3
Stream	GLITS_tone_192.mp3
Desc	MP3
Stream Quality Info	199 of 480 kB
Signal Credibility	0
AF Peak	AF pk:118
Silence Time (secs)	*

#### FM Mode Info


Mux	FM
IVIUX	1 141
Stream	BBC R3&#</td></tr><tr><td>Desc</td><td>Classical Music</td></tr><tr><td>Streem Quality Info</td><td>RSS:38dB SNR:12dB</td></tr><tr><td>Stream Quality Info</td><td>K35:300B SNK:120B</td></tr><tr><td>Signal Credibility</td><td>*</td></tr><tr><td>AF Peak</td><td>AF pk:44</td></tr><tr><td></td><td></td></tr><tr><td>Silence Time (secs)</td><td>*</td></tr><tr><td></td><td></td></tr></tbody></table>

#### Web Radio Mode Info


Mux	WEB
Stream	ADR-ProDAB-Test-2
Desc	http://92.27.244.13:5000
Stream Quality Info	222 kb total
Signal Credibility	0
AF Peak	AF pk:26
Silence Time (secs)	*

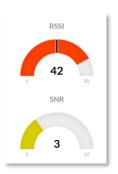


RSSI (Received Signal Strength Indicator) and SNR (Signal to Noise Ratio) for DAB reception. Note: Black bar on RSSI gauge is the threshold for change over set in the Change Over menu.

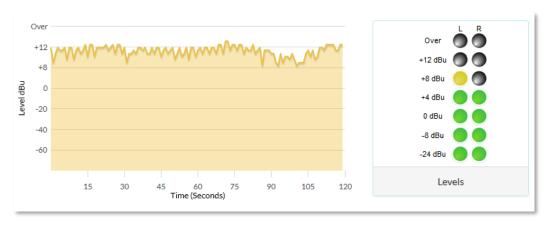

Real time audio level indicators. LED meter OdBu audio output is factory set to 18dB below FSD (Full Scale Digits)

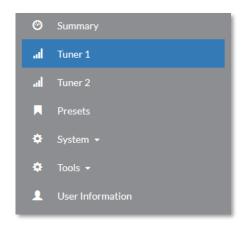


Select for more detailed information to be displayed.

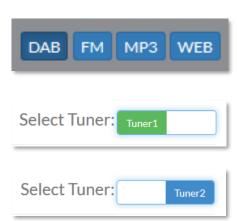


Current mode selected. Note: only one tuner at a time can be set to Web or MP3 mode.

Click here to take control of a tuner.

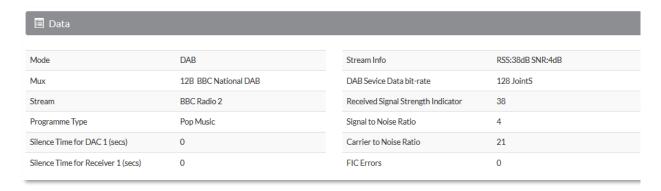




Black markers indicate set threshold for change over for either RSSI or Audio level (silence) set in Change Over menu.

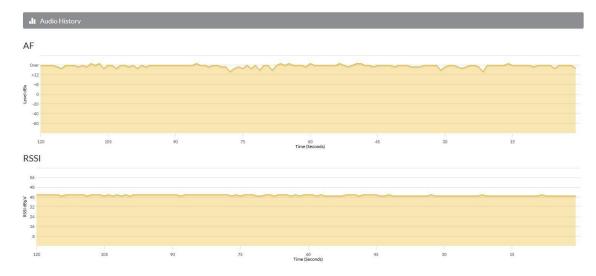


Real time history display of Audio level and RSSI

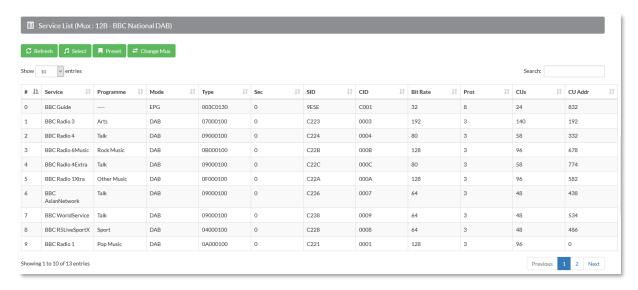


Service list for MUX that tuner is currently tuned to. The table columns can be sorted by clicking in the heading cell of each column.


Using "Change Mux" button you can select a specific MUX from the dispalyed table. ProDAB will attempt to turn to the selected MUX and if it is available will then display the Service List.

Note that Services will then also be added to the Station list.

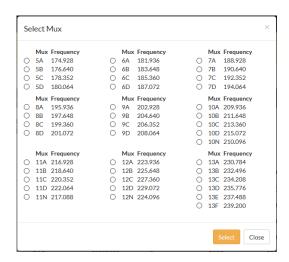

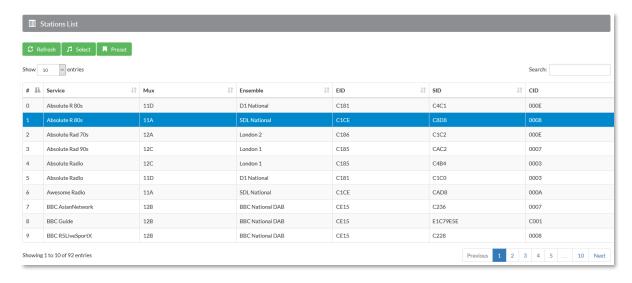

Stored Stations list obtained by DAB SCAN or added via "Change MUX" button.

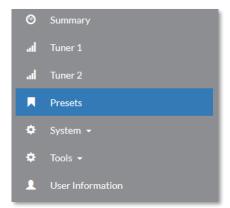


Description

Selects


Absolute R 80s

Absolute R 80s

Click here to set or recall presets. Presets can be any combination of DAB, FM, MP3 or Web. Up to 12 presets can be defined.

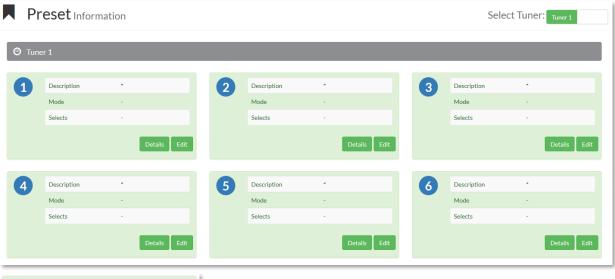


Click the Number to recall a preset.

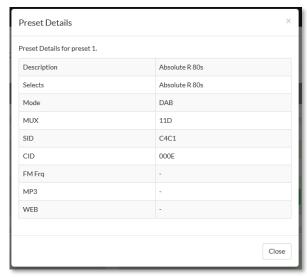



Preset Edit Screen


**Preset Details** 

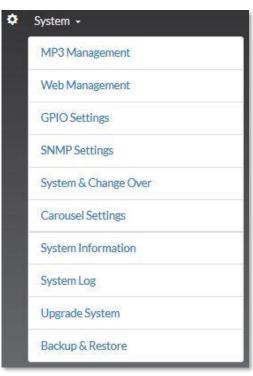



System information is only available when you sign In as Admin.



Note: Maximum file size for upload via Web GUI is 110MB

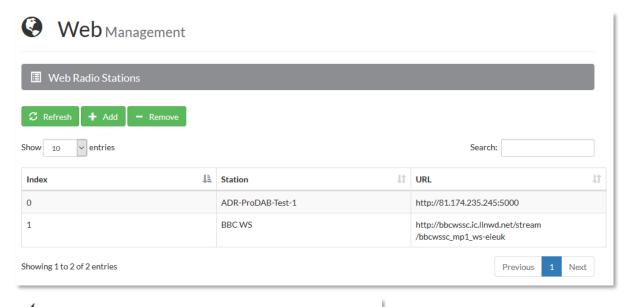


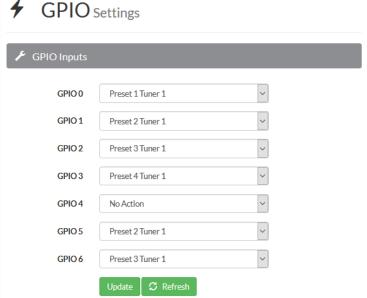


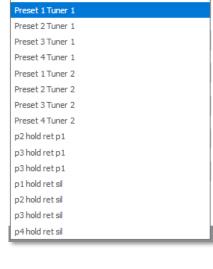



No Action

**GPIO** Options available

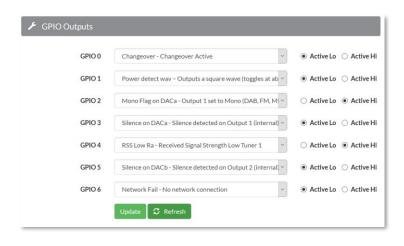


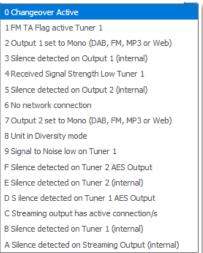


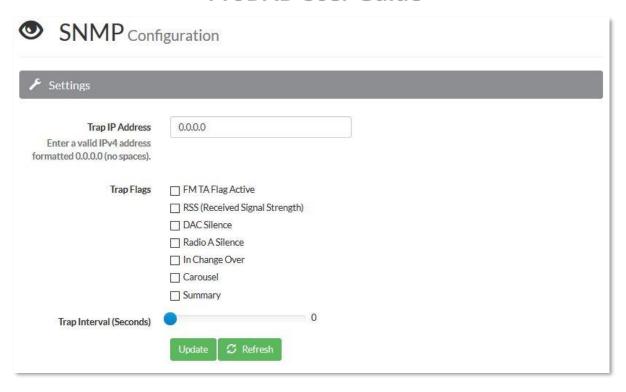

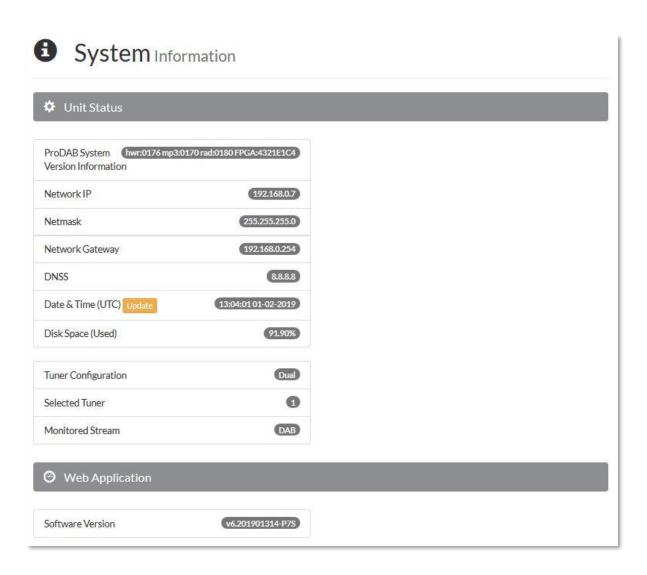




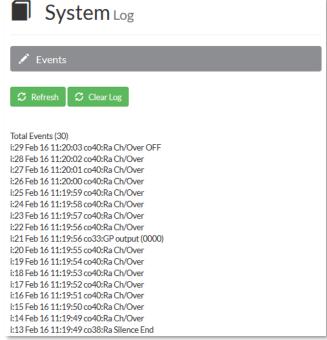


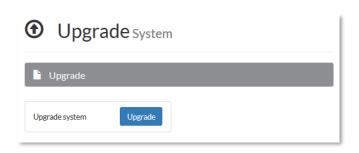

Press "Upgrade" then browse to upgrade file, the "Install" – The upgrade process takes about 3 minutes and you will need to refresh the browse page.


Note: System configuration files and USB upload script are downloaded as a single zip file.

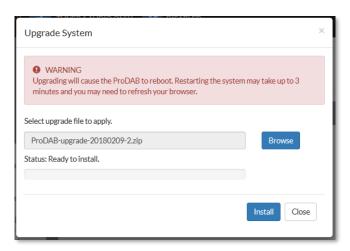


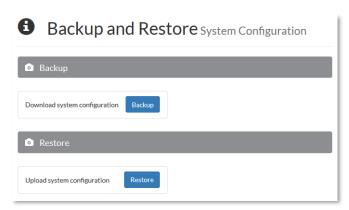


To restore, either unzip all files to the root of a blank USB stick formatted FAT32 or Upload via the "Restore" button using the web application.

## **System & Changeover**

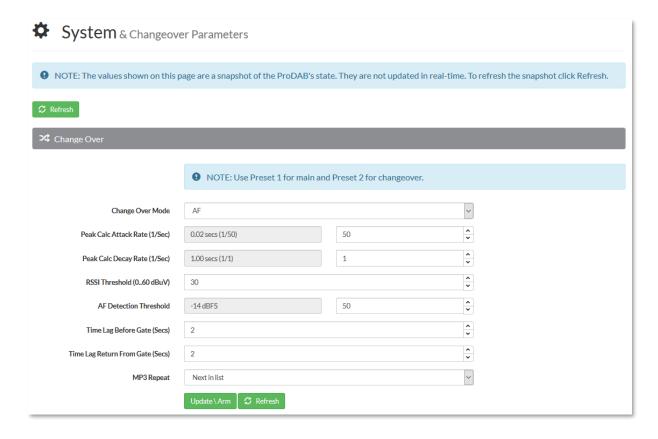


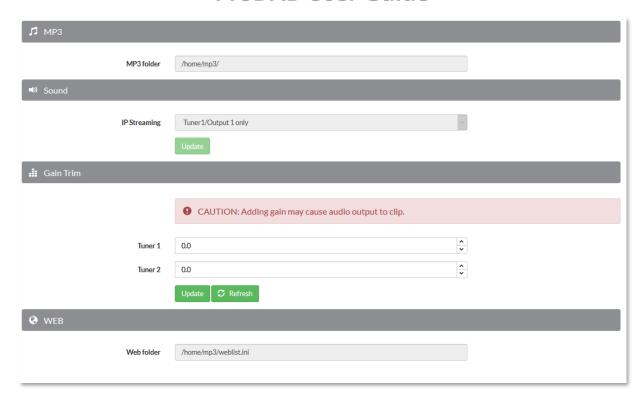


## **Change Over Armed:**

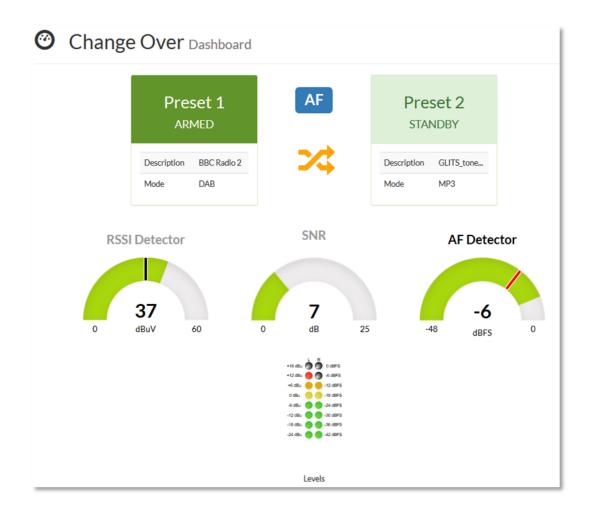

## **Change Over Active:**

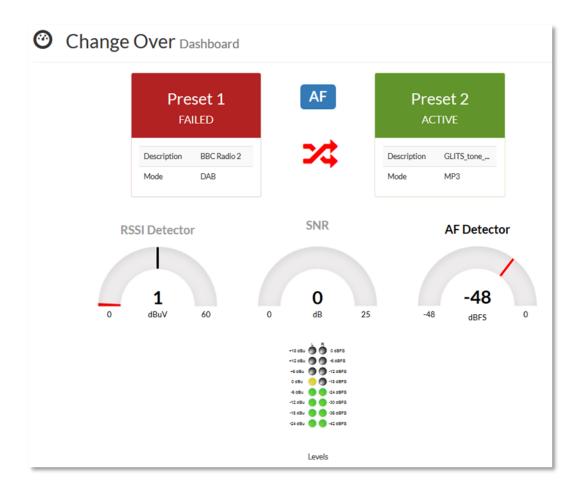

### **Carousel Mode**

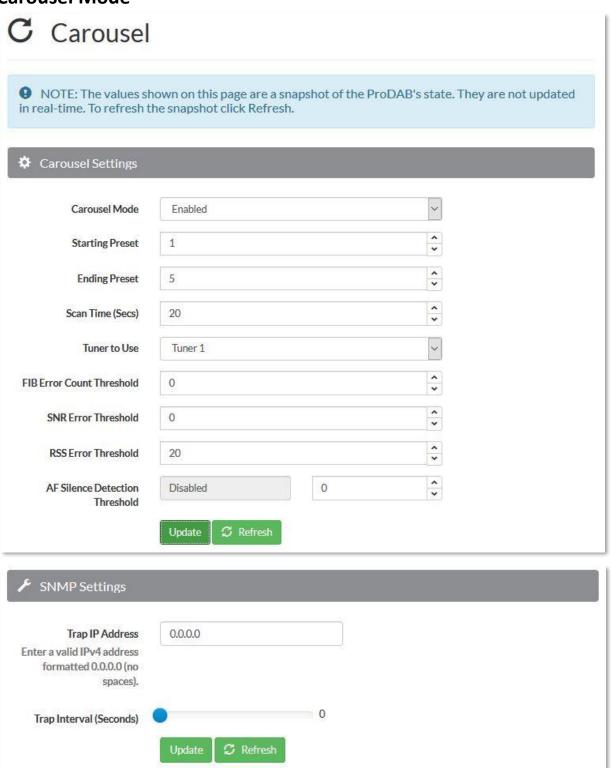




Blue bar shows the Preset being scanned






DAB Band Scan, Select Start & End Frequency either by MUX or frequency. Scan setting have been optimised for the ProDAB but can be changed if needed.



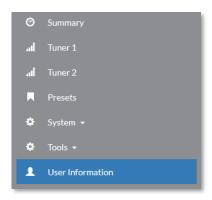


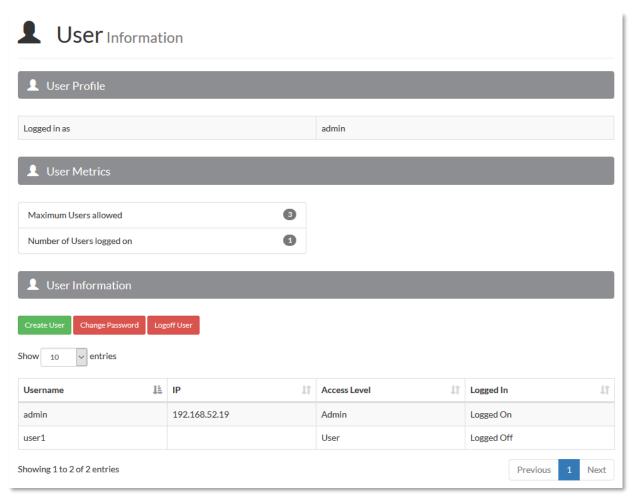


# 16. Spectrum Analyser Utility (Front Panel Menu)

The ProDAB has a built-in simple spectrum analyser, which can be accessed as detailed below. All scans are run using the FM mode of the chip set (DAB mode only "looks" for multiplexers). Typical setting as below:


**Note:** That when in this mode the current tuner is dedicated to this function.

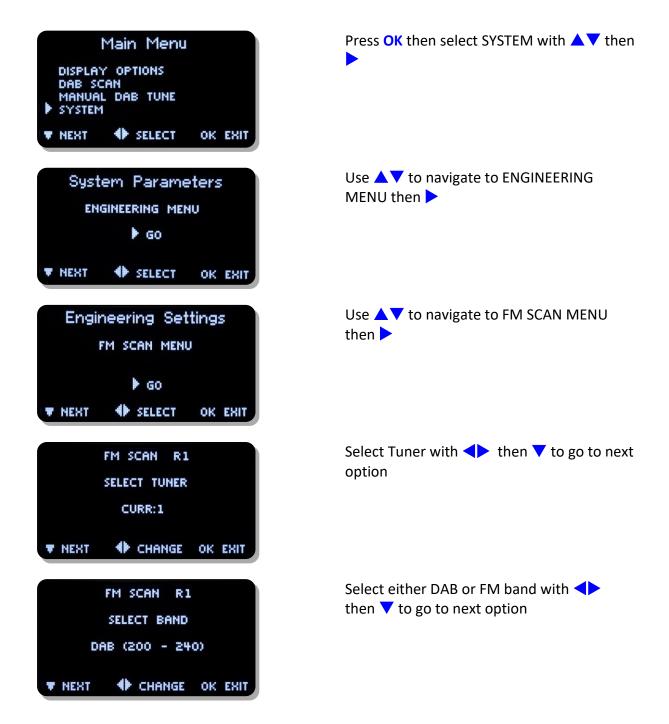

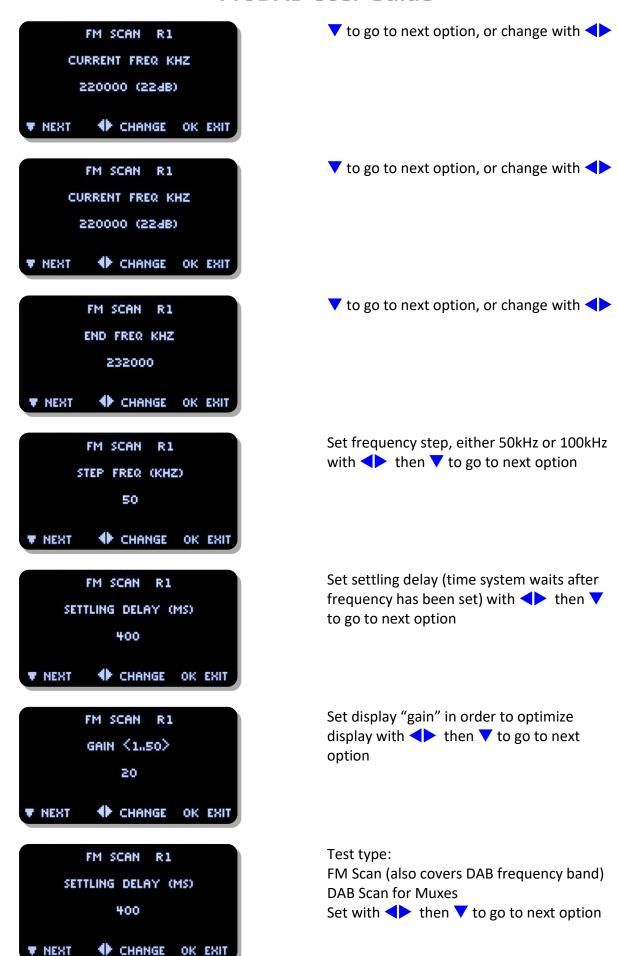





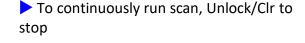




Example "zooming" in to a specific MUX





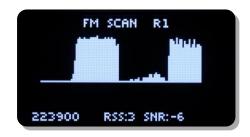

Mux 12A very low level between 11D & 12B

11D - RSSI = 42dBuV

12A - RSSI = 22dBuV

12B - RSSI = 41dBuV

Audio & Design Reading Ltd. Hereby confirm that the ProDAB-2 conforms to the requirements of EN50081-1 & EN60950 provided it is used as described in this manual and in the sections below:

To comply with the EMC Directive EN50081-1 (generic), it is recommended that all-digital input and output cabling be of Belden type 1696A or its exact equivalent. All input/output connectors must be of good quality and be constructed with RF protected covers. All interconnections via cables must carry a full earth shield, which should be connected to the RF shielded covers at all times. Input/output cables must be terminated to comply with the AES/EBU and IEC958 digital audio standards protocol.

This unit is wired so that a technical earth is connected to the chassis via the mains input socket. It is recommended that this connection be made to the mains earth system at all times to minimise the effects of radiated and conducted RF emissions.

#### **Low Voltage Directive EN60950:**

There are no serviceable parts within the unit. All repair work must be referred to a qualified electronic engineer or returned to the factory. In the case where the unit contains plug in modules, always switch off the unit before removing or replacing any module.

Audio & Design Reading Ltd does not accept responsibility for non-compliance if the above criteria are not met in full.

#### **WARRANTY:**

All Audio & Design products are of the highest quality and designed to give long, trouble free service. Nevertheless they are fully guaranteed for one year from the date of purchase. Provided any faulty equipment is returned, post paid, to Audio & Design or its established Agent by the original purchaser during the relevant period we will repair, or at our opinion replace, entirely free of charge all breakdowns due to faulty workmanship or materials. In keeping with normal practice, breakdowns due to fair wear and tear, misuse, neglect or faulty adjustment by the user, are outside the scope of this warranty.

**Warning:** Warranty repairs are subject to serial number checking. We reserve the right not to service any equipment whose serial number has in any way, been defaced or altered.

**WEEE Directive:** The end user must excise due care when disposing of this product at the time it is deemed as waste material.

**RoHS:** The current status of Audio & Design products can be obtained from www.adrl.co.uk/Rohs.htm

Audio & Design Reading Ltd practices lead-free manufacturing processes. Lead free solder is used on the surface-mount PCB manufacturing processes and for hand soldering. Printed circuit boards used are immersion tin plated, and as such use no lead.

The manufacturing processes include the assembly of purchased components from various sources. Our products are offered as RoHS compliant, or lead free, only after sufficient evidence is received from the component manufacturers that their components are RoHS compliant. Audio & Design Reading Ltd relies solely on the distributor, or manufacturer of the components for identification of RoHS compliance. Whilst every effort is made to ensure compliance, Audio & Design Reading Ltd makes no warranty, or certification, or declaration of compliance concerning said components.

Audio & Design Reading Ltd defines "Lead Free" as pertaining to any product, which has been manufactured by Audio & Design Reading Ltd using components which have been declared by the manufacturers as "Lead Free". All statements by Audio & Design Reading Ltd of RoHS compliance are based on component manufacturer documentation

## **ProDAB-2 Dual User Guide**



## Audio & Design

51 Paddick Drive Lower Earley Reading Berkshire RG6 4HF UK

Tel.: +44 118 324 0046

Info: sales@adrl.co.uk Web:www.adrl.co.uk

Copyright 2019 © Audio & Design Reading Ltd Rev 4.3 (Firmware 1.82/1.83)